

Manual

Energy-saving electronic timer programming

【Description】 button

(1) "Reset" button

Re-set the clock and all the switching sequence

(2) "Up" button

Single press up button to display the "1-10" group to open and set off River countdown

(3) "Settings" button

Single by setting key for 3 seconds, you can set "weeks, hours, minutes." Press up or down key to adjust the time of addition and subtraction

(4) "Down" button

Single button to display the countdown and press down switch 10-1 group settings

(5) "Random" button

Press the random Button, upper right corner of the screen shows the words R Random state when activated, the timer will be set on the basis of a good time to trigger the delay 2-32 minutes, typically used at home where no one has anti-theft function

(6) "Countdown" button

Set key and pressing the button to switch the 24-hour countdown to the system and 12-hour system, the system default state is 24-hour

(7) The key to open mode

Continuous press under the clock on / key, the bottom of the cycle of LCD display "open" or "automatic" "off" message

[set time]

Use the timer, the first time to adjust to the current time

1-1 according to the "settings" button for 3 seconds, the screen settings and word blink Monday, and then up and down keys to set the day of the week

1-2 to set hours, minutes, and 1-1 the same operation, and then you can set the button to confirm

【Set】 regular program

2-1 Press UP key to enter the regular program, display "1" on

2-2 Repeat time setting operation automatically after 15 seconds to restore the current time, press the down button can also be more to restore the current time.

2-3 Repeat 2-1 operation, into the timer "off" procedure to show "a" customs, the same as the other set and 2-2.

2-4 in the switching process, the press set key, set the key at the same time on Mondays and flash, can choose different combinations of patterns a week, so the

timer only work within the set time.

2-5 If the error in the program settings can be open/key reset.

【Setting】 Countdown

Press the down button, LCD display below the "countdown", by setting key, the screen below the "settings" and "off" flashes, press the down button to confirm the opening countdown and off, and then set the key, ibid operations.

【Timer ON/ OFF mode】

Press the ON/ OFF, LCD screen display "on", the indicator lights, set program ineffective, then the ON/ OFF, LCD Screen displays "Automatic", the indicator lights, an auto-off. Press the ON/ OFF, LCD screen display off, the indicator light does not shine, set program ineffective, press the ON/ OFF, LCD screen display automatically, the indicator light does not shine, are automatically opened. When you set up the program, press the on/key adjust to the "automatic open" or "auto off" state.

* Note, this product settings before, must be on/key adjust to the automatic state.

~~※※ Note~~

1. this product received the sum of electrical power shall not exceed the rated Power
2. this product in Digital products, shall not make children's toys.
3. please use the in door areas clean.
4. do not attempt to disassemble, repair needs, please call someone who

※※ Quality Assurance Project

This product within one year from date of purchase warranty place, in this time period if there artificial product quality problems, the company stresses free repair.

One of the following are no longer within the scope of repairs,

1. consumers from the use, maintenance, custody of the damage caused by improper
2. the damage caused by Irresistible force
3. more than the warranty period.